


NAC3404-H33.6

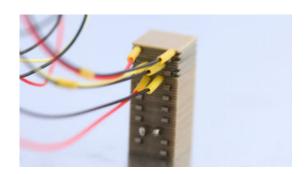


The Noliac shear stack NAC3404-H33.6 features motion in the X/Y/Z-axis. This product is ideal for stick-slip and nanopositioning applications. NAC3404-H33.6 measures 15×15 mm with a height of 33.6 mm and provides free stroke of 9/9/9 μ m and a capacitance of 44.8/44.8/278.5 nF. End plates on top and bottom are included. The shear stack has ultra thin electrodes made of standard steel as standard.


SPECIFICATIONS


Attributes	Value	Tolerance
Chamfers	X/Y/Z 0.00	
Length / outer diameter	15 mm	+/-0.20 mm
Width / inner diameter	15 mm	+/-0.20 mm
Height	33.6 mm	Whichever is largest: 2% or +/-0.2 mm
Operating voltage, max.	± 320 V	
Free stroke, from -Vmax to +Vmax	9 μm	+/- 20%
Capacitance	44.8/44.8/278.5 nF	+/- 20%
Maximum operating temperature	150 °C	
Material	NCE51	
Unloaded resonance frequency	52/52/52 kHz	
Electrodes	-	
Remarks	-	

Shear stack principle

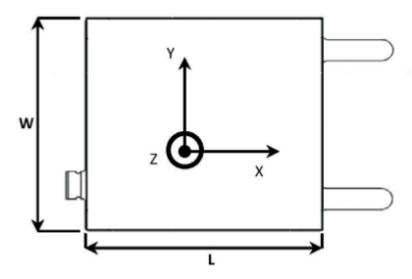

3D drawing

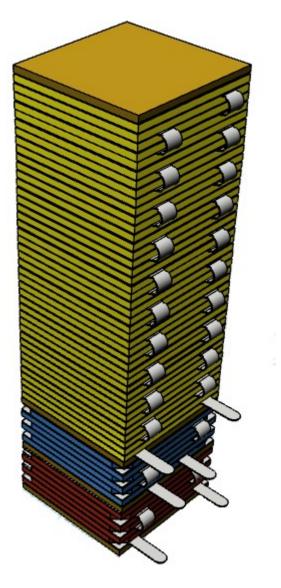

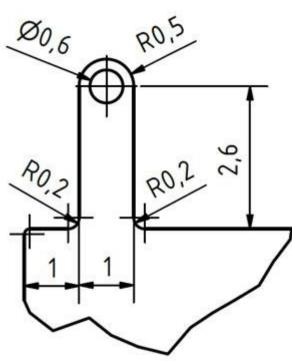

MOUNT AND CONNECT

Colour code

- Isolation plate: yellow
- Shear plate actuators X-motion: red
 Shear plate actuators Y-motion: blue
- Shear plate actuators Z-motion: clear yellow
- Electrodes: grey

End plates

As standard, the shear stacks are enclosed with 2 isolation end plates made from non-polarized piezoelectric material.

Please contact us for other options. Read more about Noliac end plates.

Operating voltage

From -Vmax = -320 V to +Vmax = +320 V for X, Y and Z motions

Free stroke

Free stroke have been measured at room temperature

Operating temperature

Standard operating temperature from -25 °C to 85 °C

Capacitance

Capacitance is measured at 1 Vpp, 1kHz

WIRES

As standard, the shear stacks are delivered with these wires:

• BS 3G 210 TYPE A, 28 AWG (red for X-motion, blue for Y-motion and yellow for Z-motion)

The types and colours of the wires can be changed upon request.

Please contact us for other wiring options.

Electrodes

As standard, the shear stacks are delivered with with these electrodes:

• Stainless steel 1.4301

Please contact us for other electrode options.

Read more under Mount and connect.